

DENON[®]

RCD-M40

CD RECEIVER

Owner's Manual

You can print more than one page of a PDF onto a single sheet of paper.

[Front panel](#)[Display](#)[Rear panel](#)[Remote](#)[Index](#)

Accessories	5
Inserting the batteries	6
Operating range of the remote control unit	6
Features	7
Part names and functions	8
Front panel	8
Display	10
Rear panel	11
Remote control unit	13

Connections

Speaker connection	17
Connecting the speaker cables	17
Connecting the subwoofer	18
Connecting speakers	18
Connecting an analog device	19
Connecting a digital device	19
Connecting an iPod or USB memory device to the USB port	20
Connecting an FM/AM antenna	22
Connecting the power cord	24

Playback

Basic operation	26
Turning the power on	26
Selecting the input source	26
Adjusting the volume	27
Turning off the sound temporarily	27
Playing CDs	28
Playing CDs	28
Playing tracks in a specific order (Program playback)	29
Playing DATA CDs	30
Playing files	31



Listening to FM/AM broadcasts	32	Playing an iPod	36
Listening to FM/AM broadcasts	32	Listening to music on an iPod	37
Automatically presetting FM stations (Auto Preset)	33	Setting operation mode (“On-Display” mode)	38
Presetting FM/AM stations manually	34	Charging the iPod/iPhone	39
Listening to preset stations	34	Playing a USB memory device	40
Setting the preset channels and changing the received frequency on the main unit	35	Playing files stored on USB memory devices	41
		Listening to DIGITAL IN	42
		Listening to ANALOG IN	42
		Convenience functions	43
		Adjusting the tone	44
		Sleep timer function	45
		Checking the current time	45
		Switching the display’s brightness	46



Settings

Menu map	47
Menu operation	48
CLOCK SETUP	49
ALARM SETUP	49
ALARM ON/OFF	50
CD AUTO PLAY	51
SPK OPTIMISE	51
H/P AMP GAIN	51
AUTO STANDBY	52
CLOCK MODE	52

Tips

Tips	54
Troubleshooting	55
Resetting factory settings	64

Appendix

Playing back DATA CDs	65
Playing back USB memory devices	66
About Discs	67
Last function memory	69
Explanation of terms	70
Trademark information	72
Specifications	73
Index	76












Thank you for purchasing this Denon product.

To ensure proper operation, please read this owner's manual carefully before using the product.

After reading this manual, be sure to keep it for future reference.

Accessories


Check that the following parts are supplied with the product.

 <p>Quick Start Guide</p>	 <p>CD-ROM (Owner's Manual)</p>	 <p>Safety Instructions</p>	 <p>Warranty (for North America model only)</p>	 <p>Power cord</p>
 <p>FM indoor antenna</p>	 <p>AM loop antenna</p>	 <p>Remote control unit (RC-1204)</p>	 <p>R03/AAA batteries</p>	




Inserting the batteries

- 1 Remove the rear lid in the direction of the arrow and remove it.

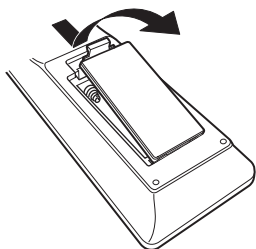

- 2 Insert two batteries correctly into the battery compartment as indicated.

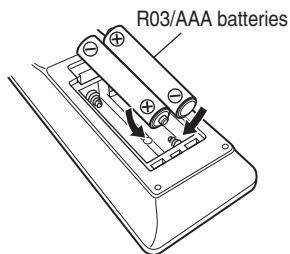


- 3 Put the rear cover back on.

NOTE

- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

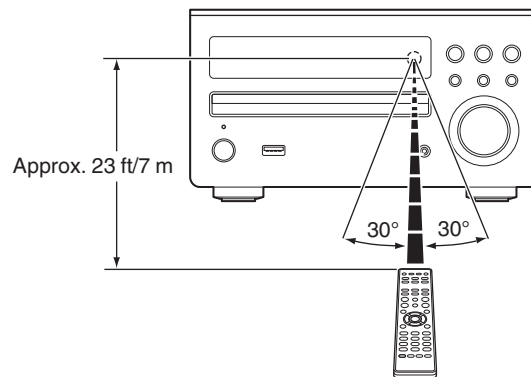


Features


- **High quality amplifier stressing sound quality**
Equipped with a 30 W + 30 W (6 Ω /Ohms) high-quality amplifier circuits.
- **Direct Play for iPod® and iPhone® via USB**
Music data from an iPod can be played back if you connect the USB cable supplied with the iPod via the USB port of this unit, and also an iPod can be controlled with the Remote control unit for this unit.
- **Weight and Dramatic sound**
The board and circuit configuration has been redesigned to achieve lower impedance. Since stable current is supplied to the power amp and other sections, it is possible to realize as much as 30 watts of power.
- **Simple & Straight circuit design for sound purity and free of coloration**
Denon's popular M series gives you high sound quality based on the simple & straight concept. Circuitry is uncomplicated, signal paths are short, and all adverse influences on sound quality have been minimized. This unit also provides the Auto standby mode, where it goes into the standby state when there is no operation for 15 minutes.
- **Playback of a variety of formats stored on a USB device**
Supports playback of USB memory devices on which MP3, WMA, FLAC or MPEG-4 AAC files are recorded. The unit's display can display the title of the track and the name of the artist of the current track.
- **Low standby power consumption**
Designed with the environment in mind, the unit consumes just 0.3 W while in standby mode.
- **Remote control unit**
This unit is shipped with a remote control unit that has large buttons for frequently used functions, allowing you to quickly find the desired function.
- **High quality headphone Amp with Amp gain control**
This unit is equipped with a high-quality headphone amplifier on which the gain can be adjusted. A variety of headphones are supported.
- **2 digital (optical) inputs for TV or digital gear**
You can connect audio from a TV or a media player digitally to enjoy impressive, high-quality sound.



Part names and functions

Front panel

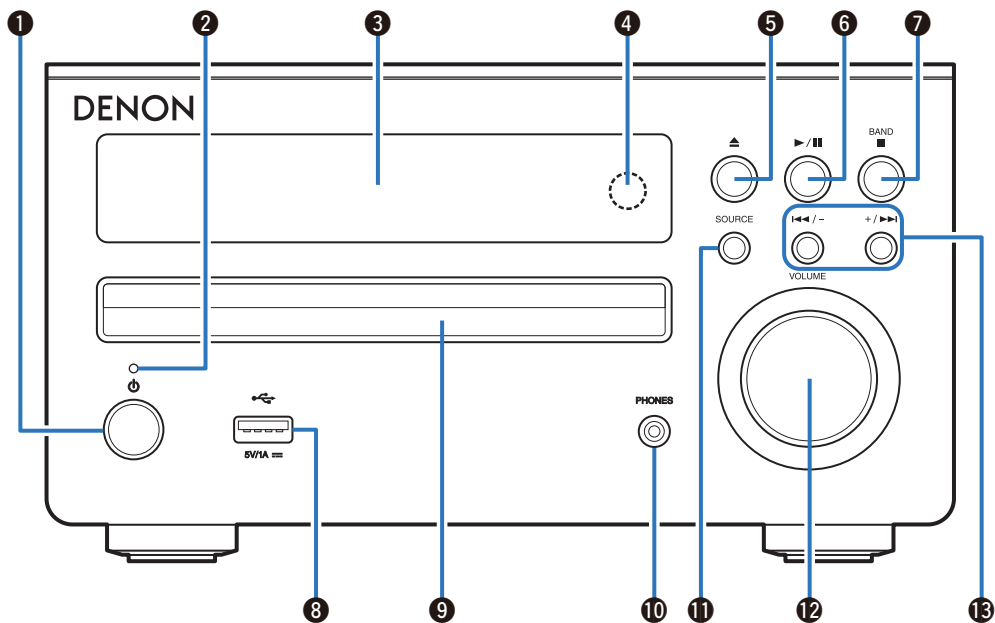

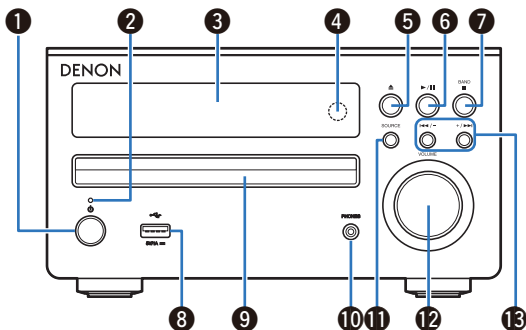

1 Power operation button (⏻)

Turns power to this unit on and off (standby).



When CLOCK MODE is turned on, this button switches between normal mode and Clock mode. (☞ p. 52)

2 Power indicator

The power indicator changes as shown below according to the status of the unit.

- Power on : Green
- Normal Standby : Off
- iPod charge standby : Red (☞ p. 39)
- Alarm standby: Orange (☞ p. 49)

3 Display

Various information is displayed here.

4 Remote control sensor

This receives signals from the remote control unit. (☞ p. 6)

5 Disc tray open/close button (▲)

Used to open/close the disc tray.

6 Play/Pause button (▶/⏸)

7 Band/Stop button (BAND ■)

8 USB port

Used to connect iPod or USB memory devices. (☞ p. 20)

9 Disc tray

Tray used to insert a compact disc.

10 Headphones jack (PHONES)

When the headphones are plugged into this jack, audio will no longer be output from the connected speakers.

NOTE

To prevent hearing loss, do not raise the volume level excessively when using headphones.

11 SOURCE button

These select the input source.

12 VOLUME knob


This adjusts the volume level.

13 Reverse-skip/Forward-skip buttons (◀◀/-, +/▶▶)

Preset/Tuning buttons (◀◀◀/-, +/▶▶▶)



Display

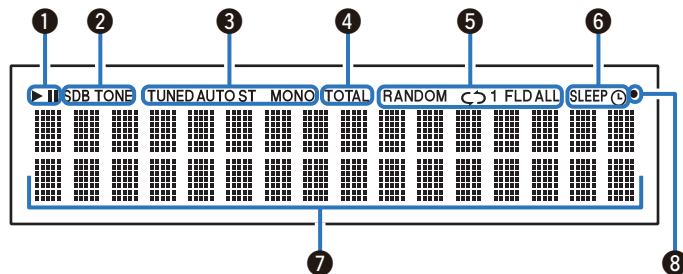

1 Playback mode indicators

▶ : During Playback

|| : During pause

2 Tone indicators

SDB: Lights when the super dynamic bass function is set to "ON".

TONE: Lights when the tone (BASS/TREBLE) is being adjusted.

3 Tuner reception mode indicators

4 TOTAL indicator

Lights when the total number of tracks and total time of the CD are displayed.

5 Play mode indicator

6 Timer operation indicator

7 Information display


Various information is displayed here.


8 Remote control signal reception indicator

Lights when a signal is received from the remote control.



Rear panel

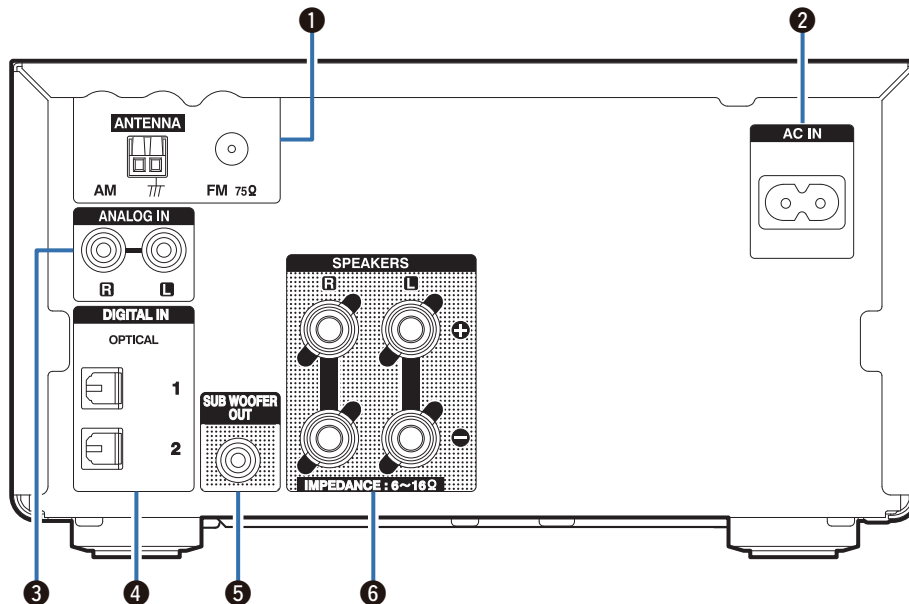

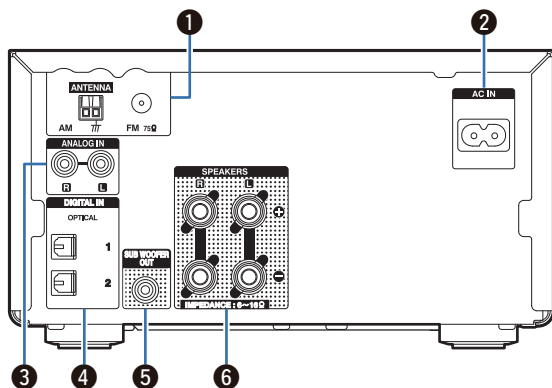

1 Antenna terminals (ANTENNA)

Used to connect FM antennas and AM loop antennas. (☞ p. 22)

2 AC inlet (AC IN)

Used to connect the supplied power cord. (☞ p. 24)

3 Analog audio connectors (ANALOG IN)

Used to connect devices equipped with analog audio connectors. (☞ p. 19)

4 Digital audio connector (DIGITAL IN)

Used to connect devices equipped with digital audio connectors. (☞ p. 19)

5 Subwoofer connector (SUBWOOFER OUT)


Used to connect a subwoofer with a built-in amplifier. (☞ p. 18)

6 Speaker terminals (SPEAKERS)

Used to connect speakers. (☞ p. 17)



Remote control unit

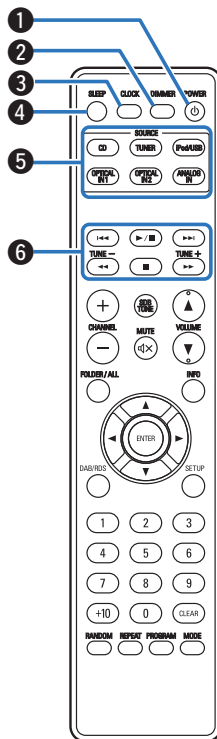

❶ POWER button (⏻)

This turns the power on/standby. (👉 p. 26)

❷ DIMMER button (☀️)

Adjust the display brightness of this unit. (👉 p. 46)

❸ CLOCK button (🕒)

The current time appear on the unit. (👉 p. 45)

❹ SLEEP button (🌙)

This sets the sleep timer. (👉 p. 45)

❺ Input source select buttons

These select the input source. (👉 p. 26)

❻ System buttons


These perform playback related operations.

- Reverse-skip / Forward-skip buttons (⏮️, ⏭️)
- Play/pause button (▶️/⏸️)
- Fast-reverse / Fast-forward buttons (⏪️, ⏩️)
- Stop button (⏹️)

Tuning buttons (TUNE +, -)

These operate the tuner. (👉 p. 32)



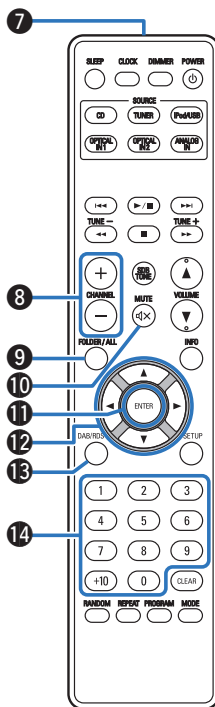

7 Signal transmitter

This transmits signals from the remote control unit. (👉 p. 6)

8 CHANNEL buttons (+, -)

This switches between PRESET channels.

9 FOLDER/ALL button

This switches the playback range on a USB device or data CD.

10 MUTE button (🔇)

This mutes the output audio. (👉 p. 27)

11 ENTER button

This determines the selection.

12 Cursor buttons (⬆️⬇️⬅️➡️)

These select items.


13 DAB/RDS button

This button on this unit cannot be used.

14 Number buttons (0 - 9, +10)

These enter letters or numbers into the unit.



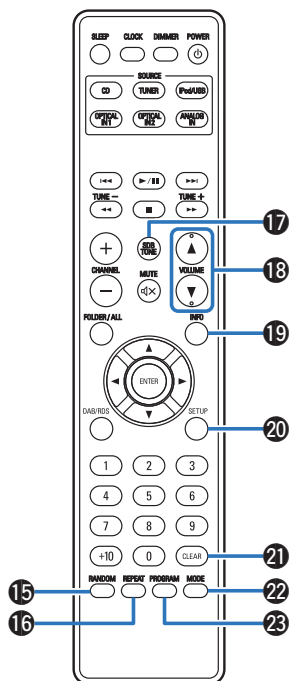

- 15 **RANDOM button**
Switches the random playback.
- 16 **REPEAT button**
Switches to the repeat playback.
- 17 **SDB/TONE button**
Adjusting the tone.
- 18 **VOLUME buttons (▲▼)**
These adjust the volume level.
- 19 **Information button (INFO)**
This switches display items such as the elapsed time, album name and title name in the playback screen.
- 20 **SETUP button**
The setting menu is displayed on the display.
- 21 **CLEAR button**
This cancels the settings.
- 22 **MODE button**
This switches the operation mode for the iPod.
- 23 **PROGRAM button**
This sets program playback.



■ Contents





Speaker connection	17
Connecting an analog device	19
Connecting a digital device	19
Connecting an iPod or USB memory device to the USB port	20
Connecting an FM/AM antenna	22
Connecting the power cord	24

NOTE

- Do not plug in the power cord until all connections have been completed.
- Do not bundle power cords with connection cables. Doing so can result in noise.

■ Cables used for connections

Provide necessary cables according to the devices you want to connect.

Speaker cable	
Subwoofer cable	
Optical cable	
Audio cable	



Speaker connection

Here we connect the speakers in the room to this unit.

This section explains how to connect them using typical examples.

NOTE

- Disconnect this unit's power plug from the power outlet before connecting the speakers. Also, turn off the subwoofer.
- Connect so that the speaker cable core wires do not protrude from the speaker terminal. The protection circuit may be activated if the core wires touch the rear panel or if the + and - sides touch each other. ("Protection circuit" (☞ p. 71))
- Never touch the speaker terminals while the power cord is connected. Doing so could result in electric shock.
- Use speakers with an impedance of 6 – 16 Ω/ohms.


Connecting the speaker cables

Carefully check the left (L) and right (R) channels and + and – polarities on the speakers being connected to this unit, and be sure to connect the channels and polarities correctly.


- 1 Peel off about 3/8 inch (10 mm) of sheathing from the tip of the speaker cable, then twist the core wire tightly.**




- 2 Turn the speaker terminal counterclockwise to loosen it.**

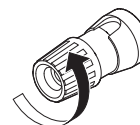

- 3 Insert the speaker cable's core wire to the hilt into the speaker terminal.**

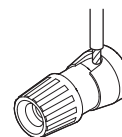


- 4 Turn the speaker terminal clockwise to tighten it.**

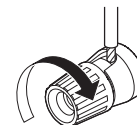


Connecting the subwoofer

Use a subwoofer cable to connect the subwoofer.

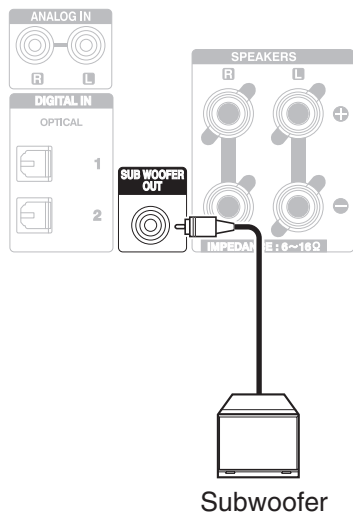


Connecting speakers

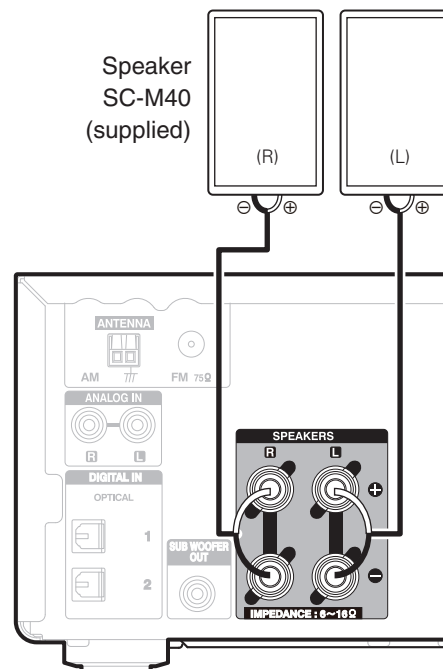


Connecting an analog device

You can connect this unit to various devices with analog audio output.

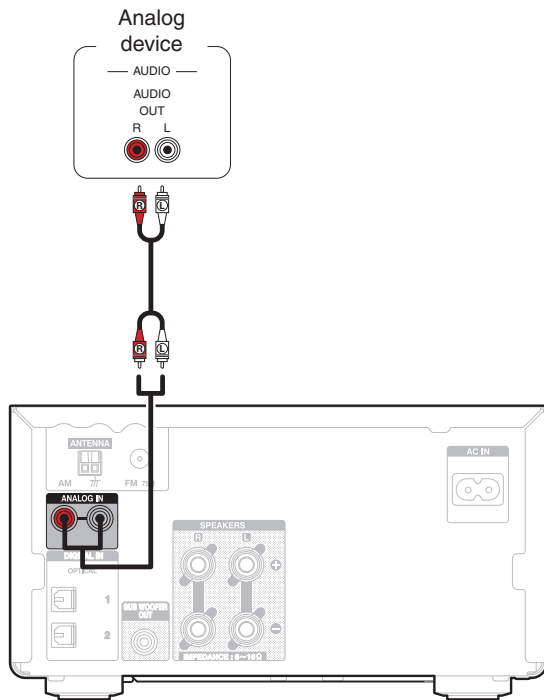


Connecting a digital device

You can connect this unit to devices with digital audio output (TV, digital gear, etc.).

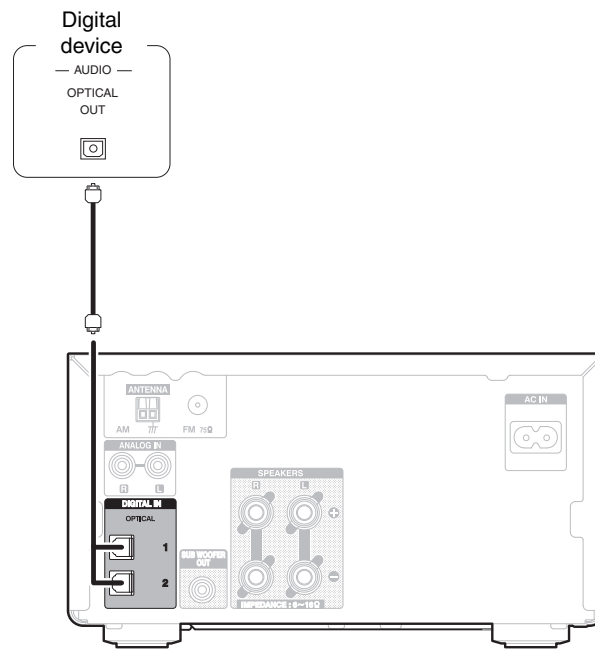

Connecting an iPod or USB memory device to the USB port

- To connect an iPod/iPhone to this unit, use the USB adapter cable that was supplied with the iPod/iPhone.
- For operating instructions, see “Playing an iPod” (🔗 p. 36) or “Playing files stored on USB memory devices” (🔗 p. 41).

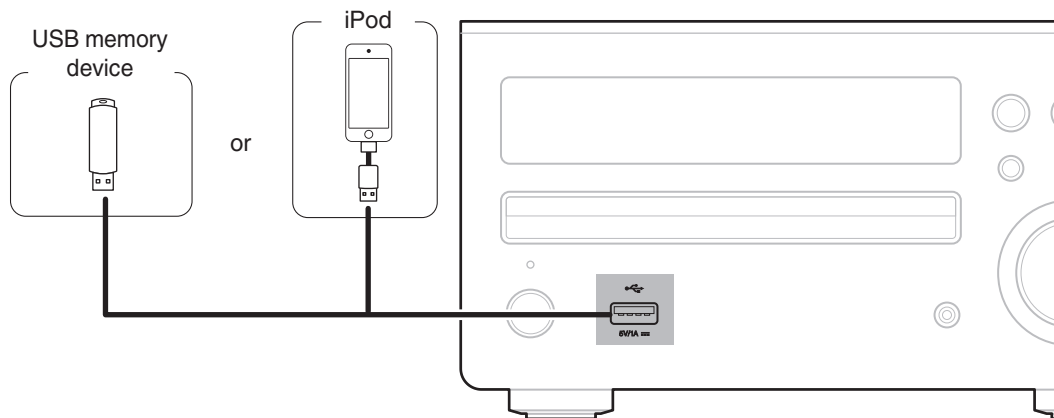

- Denon does not guarantee that all USB memory devices will operate or receive power. When using a portable USB hard disk drive (HDD) which came with an AC adapter, use that device's supplied AC adapter.

NOTE

- USB memory devices will not work via a USB hub.
- It is not possible to use this unit by connecting the unit's USB port to a PC via a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.



■ Supported iPod/iPhone models

• iPod classic



iPod classic
80GB



iPod classic
160GB (2007)



iPod classic
160GB (2009)

• iPod nano



iPod nano
3rd generation
(video)
4GB 8GB



iPod nano
4th generation (video)
8GB 16GB



iPod nano
5th generation (video camera)
8GB 16GB



iPod nano
6th generation
8GB 16GB



iPod nano
7th generation
16GB

• iPod touch



iPod touch
4th generation
8GB 16GB 32GB 64GB



iPod touch
5th generation
16GB 32GB 64GB

• iPhone



iPhone 3GS
8GB 16GB 32GB



iPhone 4
8GB 16GB 32GB



iPhone 4S
16GB 32GB 64GB



iPhone 5
iPhone 5c iPhone 5s
16GB 32GB 64GB



iPhone 6
16GB 64GB 128GB




iPhone 6 Plus
16GB 64GB 128GB



Connecting an FM/AM antenna

After connecting the antenna and receiving a broadcast signal, fix the antenna with tape in a position where the noise level becomes minimal. “Listening to FM/AM broadcasts” (🔧 p. 32)

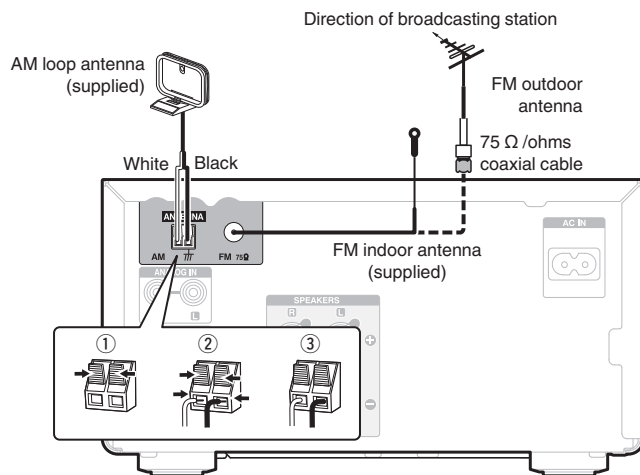



NOTE

- Do not connect two FM antennas simultaneously.
- If you are unable to receive a good broadcast signal, we recommend installing an outdoor antenna. For details, inquire at the retail store where you purchased the unit.
- Do not disconnect the AM loop antenna even when an AM outdoor antenna is connected.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.



■ AM loop antenna assembly

- 1 Put the stand section through the bottom of the loop antenna from the rear and bend it forward.
- 2 Insert the projecting part into the square hole in the stand.

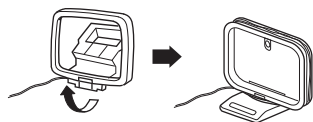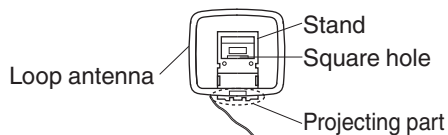

■ Using the AM loop antenna

Suspending on a wall


Suspend directly on a wall without assembling.



Standing alone


Use the procedure shown above to assemble.

When assembling, refer to "AM loop antenna assembly".

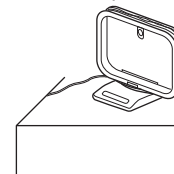

Connecting the power cord

After completing all the connections, insert the power plug into the power outlet.

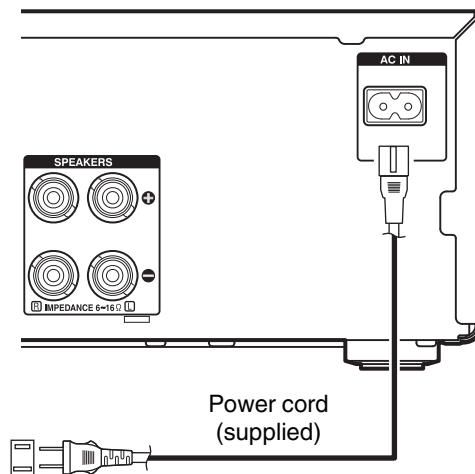

To household power outlet
(AC120 V, 60 Hz)

■ Contents

Basic operation

Turning the power on	26
Selecting the input source	26
Adjusting the volume	27
Turning off the sound temporarily	27

Playback a device


Playing CDs	28
Playing DATA CDs	30
Listening to FM/AM broadcasts	32
Playing an iPod	36
Playing a USB memory device	40
Listening to DIGITAL IN	42
Listening to ANALOG IN	42

Other functions

Convenience functions	43
-----------------------	----



Basic operation

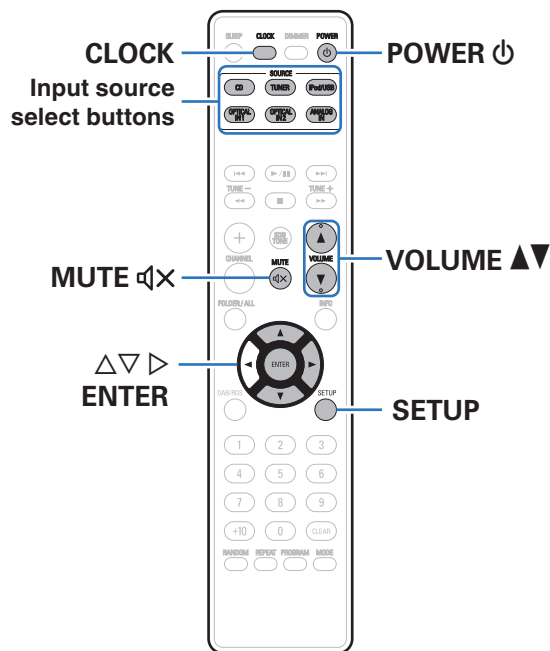

Turning the power on

1 Press POWER ϕ to turn on power to the unit.



- You can also switch the power to standby by pressing ϕ on the main unit.

Selecting the input source

1 Press the input source select button to be played back.
The desired input source can be selected directly.



- You can also select the input source by pressing SOURCE on the main unit.
- Press TUNER again while the source is set to Tuner to switch the (FM-AM) band.



Adjusting the volume

1 Use **VOLUME ▲▼** to adjust the volume.

The volume level is displayed.



- You can also adjust the volume this by turning VOLUME on the main unit.

Turning off the sound temporarily

1 Press **MUTE ◀X**.


“MUTE ON” is displayed.



- To cancel mute, either adjust the sound volume or press MUTE ◀X again.



Playing CDs

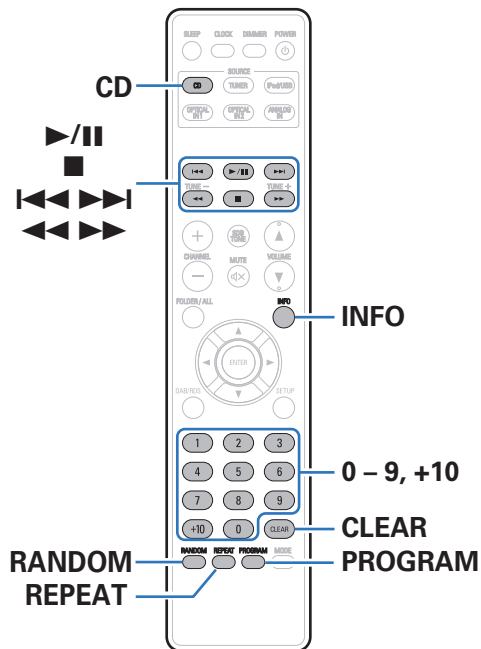

Playing CDs

- 1 Press CD to switch the input source to “DISC”.
- 2 Insert a disc. (📖 p. 67)
Playback starts.
 - Press ▲ on the main unit to open/close the disc tray.

NOTE

- Do not place any foreign objects in the disc tray. Doing so could result in damage.
- Do not push the disc tray in by hand when the power is turned off. Doing so could result in damage.



Operation buttons	Function
	Playback / Pause
	Stop
	Skip to previous track / Skip to next track
	(Press and hold) Fast-reverse / Fast-forward
0 - 9, +10	Select the track
RANDOM	Random playback <ul style="list-style-type: none"> • Can be set during stop.
REPEAT	Repeat playback <ul style="list-style-type: none"> • Switching between Single-track repeat and All-track repeat.
INFO	Switching the elapsed time display.

Playing tracks in a specific order (Program playback)

1 In the stop mode, press PROGRAM.

“PGM” is displayed.

2 Use 0 - 9, +10 to select the tracks.

[Example]

To program tracks 3, 12, 7 to play in that order: Press PROGRAM, 3, +10, 2, 7.


3 Press .



- The program is cleared when the disc tray is opened or the power is turned off.
- In the stop mode, press CLEAR, the last track programmed is cleared. Press to select the track you want to delete.
- In the stop mode, press PROGRAM, clear the all programmed track.
- Up to 25 tracks can be programmed.
- When RANDOM is pressed during program playback, the programmed tracks are played in random order.
- When REPEAT is pressed during program playback, the tracks are played repeatedly in the programmed order.



Playing DATA CDs

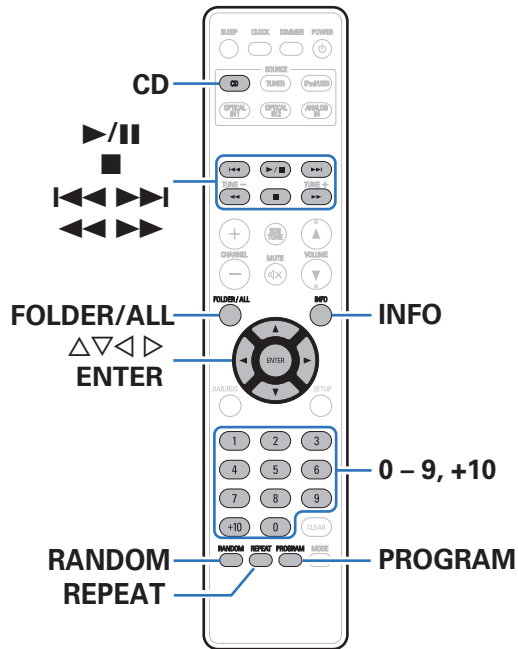

- This section explains how to playback MP3 and WMA files that are recorded onto a CD-R or CD-RW.
- There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA (Windows Media® Audio) format. The music (files) downloaded from such sites can be stored on CD-R or CD-RW discs and played on this unit.

“Windows Media” and “Windows” are the trademarks or registered trademarks of “Microsoft Corporation” in the United States and other countries.



Playing files

- 1 Press CD to switch the input source to “DISC”.
- 2 Load a CD-R or CD-RW containing music files in the MP3 or WMA format into the disc tray. (☞ p. 67)
Playback starts.


Operation buttons	Function
▶/	Playback / Pause
■	Stop
◀◀▶▶	Skip to previous track / Skip to next track
◀◀▶▶	(Press and hold) Fast-reverse / Fast-forward
△▽	Folder select
◀▶	File select
0 - 9, +10	Select the track
	Switch playback mode
FOLDER/ALL	<ul style="list-style-type: none"> Switching between playing back all files within the selected folder or all tracks on the disc.
RANDOM	Random playback <ul style="list-style-type: none"> Can be set during stop.
REPEAT	Repeat playback <ul style="list-style-type: none"> Switching between Single-track repeat and All-track repeat.
INFO	Switching the File name, Title name/Artist name and Title name/Album name.
ENTER	Enter the selected item

■ Files that can be played back

See “Playing back DATA CDs” (☞ p. 65).



Listening to FM/AM broadcasts

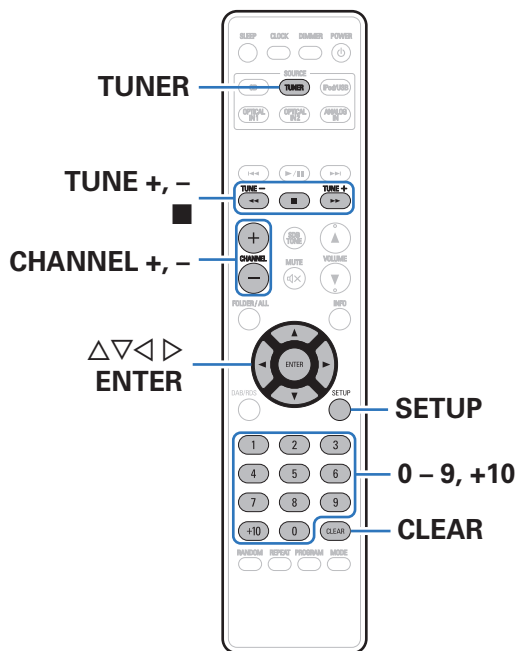

For details about how to connect the antenna, see “Connecting an FM/AM antenna” (🔗 p. 22).

Listening to FM/AM broadcasts

1 Press TUNER to select the reception band.

FM AUTO: When listening to an FM broadcast.

FM MONO: If the signal is weak and stable stereo reception is not possible, select “FM MONO” to receive in monaural.

AM: When listening to an AM broadcast.

- When “FM AUTO” is selected: “AUTO” is displayed.
- When the reception band mode is set to “FM AUTO”, the “ST” indicator lights when a stereo broadcast is tuned in.

2 Press TUNE + or TUNE - to select the station you want listen to.

When a station is received, the “TUNED” indication will light.

- When “FM AUTO” is selected: Automatically search for and tune to a receivable radio station.
- When “FM MONO” is selected: Manually change the frequency one step at a time each time the button is pressed.



Automatically presetting FM stations (Auto Preset)

This unit can be preset with a total of 40 FM broadcast stations.

- 1 Press SETUP during FM reception.**
- 2 Use $\Delta\nabla$ to select “TUNER SETUP”, then press ENTER.**
- 3 Use $\Delta\nabla$ to select “FM AUTO PRESET”, then press ENTER.**
- 4 Press ENTER while “PRESS ENTER” is flashing.**

Broadcast stations are preset automatically.



- To stop auto tuning, press ■.
- Broadcast stations whose antenna signals are weak cannot be preset automatically. If you wish to preset such stations, tune them in manually.
- AM stations cannot be automatically preset.

NOTE

When FM auto preset is performed, the channel currently registered as the FM preset is deleted, and the newly preset FM broadcast station is registered to the same number as the deleted channel.

■ Giving station names to preset channels

Names of up to 8 characters can be input.

- 1 Tune in the preset channel you want to name.**
- 2 Press ENTER twice.**
The display switches to the station name input display.
- 3 Input the station name.**
Names of up to 8 characters can be input.

$\Delta\nabla$:	Selects the character.
$\triangleleft\rangle$:	Moves the cursor to the right.
CLEAR :	Deletes the currently selected character.

- Characters that can be input.
[A ~ Z, 0 ~ 9, ^' () z + , - . / = (space)]

- 4 Press ENTER.**
The characters you have input are entered.
 - To give names to other stations, repeat steps 1 to 4.



Presetting FM/AM stations manually

This unit can be preset with a total of 40 FM/AM broadcast stations.

1 Tune in the station you want to preset.

2 Press ENTER.

The minimum number display “P--” for the unregistered preset flashes.

3 Use 0 – 9, +10 or CHANNEL –, + to select the number to be preset, then press ENTER.

The reception frequency and reception mode are preset and the display switches to the station name input display.

NOTE

- When the registered preset number is selected, “*” is displayed. To overwrite this preset number, press ENTER.

4 Input the station name.

Names of up to 8 characters can be input.

△▽ :	Selects the character.
◀▶ :	Moves the cursor to the right.
CLEAR :	Deletes the currently selected character.

- Characters that can be input.
[A ~ Z, 0 ~ 9, ^ ' () z + , - . / = (space)]

Listening to preset stations

- Use 0 – 9, +10 or CHANNEL –, + to select the preset number.



Setting the preset channels and changing the received frequency on the main unit

◀◀/-, +/▶▶ on the main unit can be used both for switching the preset channel and for tuning.

Before operating them, switch the main unit to the “preset mode” or “tuning mode” using the procedure below.

- 1** Press **SETUP**.
- 2** Use **△▽** to select “**TUNER SETUP**”, then press **ENTER**.
- 3** Use **△▽** to select “**MODE SELECT**”, then press **ENTER**.
- 4** Use **△▽** to select “**PRESET MODE**” or “**TUNING MODE**”, then press **ENTER**.

PRESET MODE:

Press **◀◀/-, +/▶▶** on the main unit to switch preset channels.

- This is the same operation as CHANNEL **-**, **+** on the remote control unit.


TUNING MODE:

Press **◀◀/-, +/▶▶** on the main unit to change the received frequency.

- This is the same operation as TUNE **-**, **+** on the remote control unit.
-



Playing an iPod

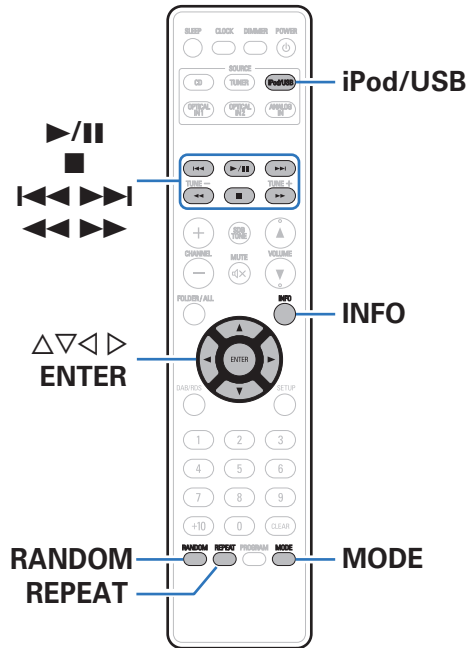

- You can use the USB cable provided with the iPod to connect the iPod with the unit's USB port and enjoy music stored on the iPod.
- For information on the iPod models that can be played back with this unit, see "Supported iPod/iPhone models" (👉 p. 21).



Listening to music on an iPod

1 Connect the iPod to the USB port. (👉 p. 20)

When you connect iPod to the USB port, the input source automatically switches to “iPod/USB”.

2 Press iPod/USB to switch the input source to “iPod/USB”.

“From iPod” is displayed on the display of this unit.

3 Operate iPod itself directly while seeing the iPod screen to play back music.



- The iPod display modes include “From iPod” and “On-Display”. By default, “From iPod”, where you directly operate the iPod itself while looking at the iPod screen, is set.
- To change to “On-Display” where operations are performed while the iPod information is displayed on this unit, see “Setting operation mode (“On-Display” mode)” (👉 p. 38).

NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- Note that Denon will accept no responsibility whatsoever for any problems arising with the data on an iPod when using this unit in conjunction with the iPod.



Setting operation mode (“On-Display” mode)

In this mode, various lists and screens during playback on the iPod are displayed on the body.

This section describes the steps up to playing back tracks on the iPod in “On-Display”.

- 1 Press **MODE** and display “On-Display”.
- 2 Use $\Delta \nabla$ to select the file to be played, then press **ENTER**.

Playback starts.

Display mode		From iPod	On-Display
Playable files	Music file	✓	✓
	Video file	*	
Active buttons	Remote control unit (This unit)	✓	✓
	iPod	✓	

* Only the sound is played.

Operation buttons	Function
$\blacktriangleright / \parallel$	Playback / Pause
\blacksquare	Stop
$\blacktriangleleft \blacktriangleleft \blacktriangleright \blacktriangleright$	Skip to previous track / Skip to next track
$\blacktriangleleft \blacktriangle \blacktriangleright$	(Press and hold) Fast-reverse / Fast-forward
RANDOM	Random playback
REPEAT	Repeat playback <ul style="list-style-type: none"> • Switching between Single-track repeat and All-track repeat.
MODE	Switching between On-Display or From iPod mode
$\Delta \nabla \triangleleft \triangleright$	Select the item
ENTER	Enter the selected item
INFO	Switching the Title name/Artist name and Title name/Album name.

NOTE

- Denon will accept no responsibility whatsoever for any loss of iPod data.
- Depending on the type of iPod and the software version, some functions may not operate.



Charging the iPod/iPhone

You can charge your iPod/iPhone by connecting it to USB port.


■ Standby charging

If the unit enters power standby mode while the iPod/iPhone is charging, the unit will switch to standby charging mode, and the iPod/iPhone will continue to be charged. When in standby charging mode, the power indicator lights turns red.

When the iPod/iPhone is fully charged, the unit automatically stops supplying power for charging and enters normal power standby mode, and the power indicator lights turns off.



Playing a USB memory device

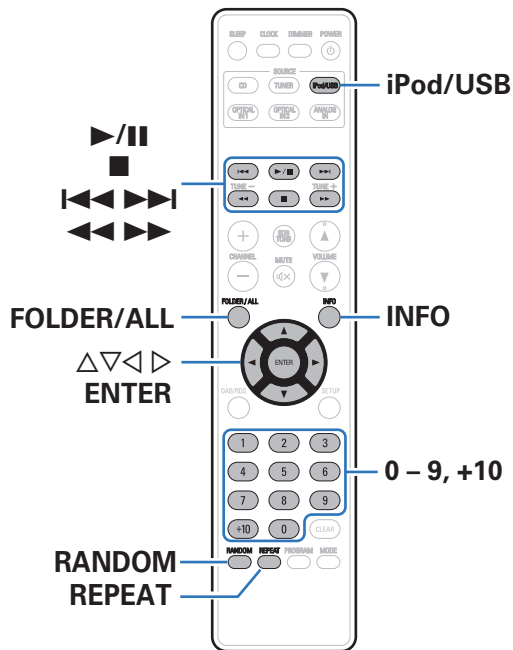

- Playing back music files stored on a USB memory device.
- Only USB memory devices conforming to mass storage class and MTP (Media Transfer Protocol) standards can be played on this unit.
- This unit is compatible with USB memory devices in "FAT16" or "FAT32" format.
- This unit can play back the following files.
 - MP3
 - WMA
 - FLAC
 - WAV
 - MPEG-4 AAC



Playing files stored on USB memory devices

1 Connect the USB memory device to the USB port. (🔧 p. 20)

When you connect USB memory device to the USB port, the input source automatically switches to “iPod/USB”.

2 Use $\Delta \nabla$ to select the file to be played, then press ENTER.

Playback starts.

Operation buttons	Function
$\blacktriangleright \parallel$	Playback / Pause
■	Stop
$\blacktriangleleft \blacktriangleright$	Skip to previous track / Skip to next track
$\blacktriangleleft \blacktriangleright$	(Press and hold) Fast-reverse / Fast-forward
RANDOM	Random playback <ul style="list-style-type: none"> • Can be set during stop.
REPEAT	Repeat playback <ul style="list-style-type: none"> • Switching between Single-track repeat and All-track repeat.
$\Delta \nabla \blacktriangleleft \blacktriangleright$	Select the item
ENTER	Enter the selected item
INFO	Switching the File name, Title name/Artist name and Title name/Album name. While a WAV file is being played back, only the file name is displayed.


NOTE

- Note that Denon will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.

■ Files that can be played back

See “Playing back USB memory devices” (🔧 p. 66).



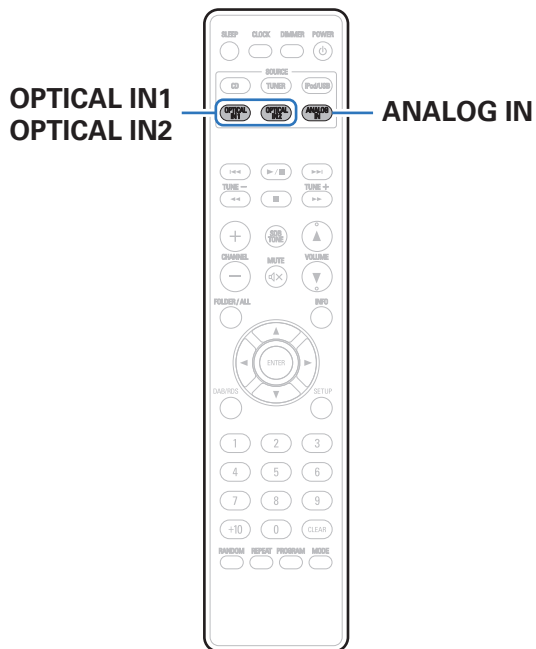

Listening to DIGITAL IN

- 1 Prepare for playback.**
Check the connection, then turn on this units.
- 2 Press “OPTICAL IN1” or “OPTICAL IN2” to select DIGITAL IN.**
- 3 Play the component connected to this unit.**




- Only 2-channel linear PCM digital audio signals can be inputted through the DIGITAL IN connector of this unit.

Listening to ANALOG IN

- 1 Prepare for playback.**
Check the connection, then turn on this units.
- 2 Press ANALOG IN to select “ANALOG IN”.**
- 3 Play the component connected to this unit.**



Convenience functions

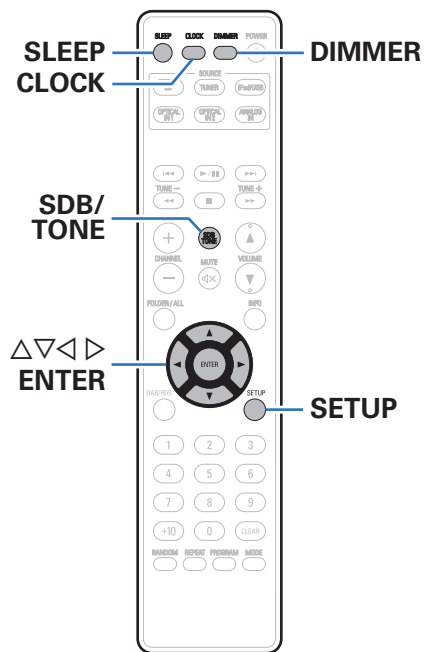

Adjusting the tone	44
Sleep timer function	45
Checking the current time	45
Switching the display's brightness	46



Adjusting the tone

1 Press **SDB/TONE** to select the tone parameter to be adjusted.

2 Use **<|>** to adjust the “**SDB**”, “**BASS**”, “**TREBLE**”, “**BALANCE**” or “**S.DIRECT**”.

❑ **SDB (Super Dynamic Bass)**

Emphasizes the bass sound when the Super Dynamic Bass (SDB) function is set to ON (maximum +8 dB).

ON / OFF (Default: OFF)

❑ **Bass**

Adjusts the bass sound.

-10dB – +10dB (Default : 0dB)

❑ **Treble**

Adjusts the treble sound.

-10dB – +10dB (Default : 0dB)

❑ **Balance**

Use **<|>** to adjust the left/right volume balance.

❑ **S.DIRECT (Source Direct)**

The tone is not adjusted.

ON / OFF (Default: OFF)



Sleep timer function

You can have the power automatically switched to standby once a set time has elapsed. This is convenient for listening while going to sleep.

1 Press SLEEP during playback and select the setting time.

- The “SLEEP” indicator on the display lights.
- You can set the sleep timer in the range from 10 to 90 minutes in steps of 10 minutes.

■ To cancel the sleep timer

Press SLEEP to set “SLEEP OFF”.

The “SLEEP” indicator on the display turns off.



- The sleep timer setting is canceled when the unit switches to standby mode.
- To check the time remaining until the sleep timer is activated, press SLEEP.

Checking the current time

■ Checking the current time when the power is on

Press CLOCK.

- Press once more and the display returns to its original condition.

■ Checking the current time when the power is set to standby

Press CLOCK.

- The current time is displayed for 10 seconds.



- The time cannot be set when in the standby mode. Turn on the power first.
- This unit displays the time in 12-hour format.



Switching the display's brightness

1 Press DIMMER.

- The brightness of the display switches each time the button is pressed (4 levels).



- If the buttons are operated when the display is turned off, information is displayed temporarily at a low brightness level.




Menu map

For menu operations, see the following page.

By default, this unit has recommended settings defined. You can customize this unit based on your existing system and your preferences.

Setting items	Description	Page
CLOCK SETUP	Sets the current time.	49
ALARM SETUP	Sets the timer playback.	49
ALARM ON/OFF	Set the alarm to on or off.	50
TUNER SETUP	The following items are displayed when TUNER SETUP is selected.	–
FM AUTO PRESET	Automatically presets FM channels.	33
MODE SELECT	Select the Tuner operation to assign to the button.	35
CD AUTO PLAY	Set whether or not to automatically play a disc when the disc is inserted.	51
SPK OPTIMISE	Sets the optimum playback properties of the speakers SC-M40.	51
H/P AMP GAIN	Set the gain of the headphone amplifier.	51
AUTO STANDBY	Sets the unit power to standby when the unit is not in use.	52
CLOCK MODE	The clock is constantly displayed.	52



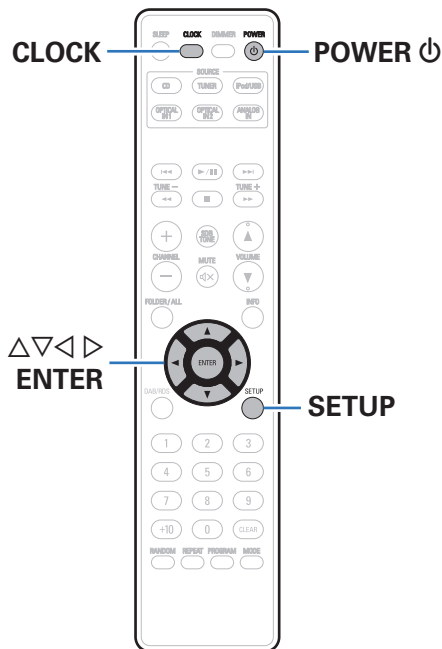

Menu operation

- 1 Press SETUP.**
The menu is displayed on the display.
- 2 Use Δ / ∇ to select the menu to be set or operated, then press ENTER.**
- 3 Use Δ / ∇ to change to desired setting.**
- 4 Press ENTER to enter the setting.**
 - Exiting the Menu, press SETUP while the menu is displayed.
The display returns to the normal display.



CLOCK SETUP

1 Use $\Delta\nabla$ to set the “hours”.

2 Press ENTER.

The “minutes” display flashes.

3 Use $\Delta\nabla$ to set the “minutes”.

4 Press ENTER.

The current time is set, and the normal display reappears.

☐ Checking the current time when the power is on

Press CLOCK.

Press once more and the display returns to its original condition.

☐ Checking the current time when the power is set to standby

Press CLOCK.

The current time is displayed for 10 seconds.



- The time cannot be set when in the standby mode. Turn on the power first.

ALARM SETUP

① MODE SELECT

Use $\Delta\nabla$ to select the alarm mode, then press ENTER.

ONCE ALARM:

Playback starts and stops (the power turns off) once only at the set times.

EVERYDAY ALARM:

Playback starts and stops (the power turns off) at the set times each day.

② SOURCE SELECT

Use $\Delta\nabla$ to select the source, then press ENTER.

DISC / iPod/USB / TUNER / ANALOG IN / OPTICAL IN 1 / OPTICAL IN 2



- If you have selected TUNER in “SOURCE SELECT”, select the Preset Number.
- When no name has been registered for the selected preset number, the frequency appears after the preset number is displayed.

③ START TIME

Use $\Delta\nabla$ to select “hours” for the alarm start time, then press ENTER.

Use $\Delta\nabla$ to select “minutes” for the alarm start time, then press ENTER.



④ STOP TIME

Use $\Delta \nabla$ to select “hours” for the alarm stop time, then press ENTER.

Use $\Delta \nabla$ to select “minutes” for the alarm stop time, then press ENTER.

⑤ ALARM ON/OFF

Use $\triangleleft \triangleright$ to select “ON” or “OFF” for the alarm, then press ENTER.



- The \odot indicator lights and the alarm setting is entered.
- The alarm settings are displayed for 3 seconds.

⑥ Press POWER \downarrow to set the power to standby.

Alarm standby mode is set, and the power indicator lights orange.

ALARM ON/OFF

1 Use $\Delta \nabla$ to select “ONCE” or “EVERYDAY”.

2 Use $\triangleleft \triangleright$ to select “ON” or “OFF” for the alarm, then press ENTER. The alarm settings are displayed after this.

- When set to “OFF”, time operation is disabled, but the alarm settings remain unchanged.



CD AUTO PLAY

When the CD tray is closed, the unit can detect the DISC, automatically switch the input source to DISC and start playback of the disc.

ON (Default):	Performs automatic playback.
OFF:	Does not perform automatic playback.

SPK OPTIMISE

An optimizing filter suited for the properties of the speakers (SC-M40) can be used.

ON (Default):	The response is optimized for the speakers (SC-M40, supplied).
OFF:	The response is flat.

H/P AMP GAIN

Set the gain of the headphone amplifier. Set this according to the impedance of the connected headphones. It is recommended that this is set on the “Low” side if the headphones have low impedance and on the “High” side if they have high impedance.

LOW (Default):	Set the gain of the headphone amplifier to “Low”.
MID:	Set the gain of the headphone amplifier to “Mid”.
HIGH:	Set the gain of the headphone amplifier to “High”.



- The headphone volume varies depending on the “H/P AMP GAIN” setting. Decrease the volume or mute the audio first if changing this setting while listening to audio.



AUTO STANDBY

When there is no input signal and operation for 15 minutes, this unit automatically enters the standby mode.

ON: The unit goes into standby after 15 minutes.


OFF
(Default): The unit does not go into standby automatically.



- For the input source "ANALOG IN" only, when no operation is performed for eight hours, this unit automatically enters the standby mode.
- In the following situations, the Auto standby function does not operate.
 - When an iPod (From iPod) is connected to the USB port on the unit.
 - When the source is "TUNER".
- The default setting for the Auto Standby mode is "OFF".

CLOCK MODE

The clock is constantly displayed.

ON: Display the clock.
Press the POWER  button to switch between the clock display and the normal display.

OFF
(Default): Does not display the clock.

NOTE

- When CLOCK MODE is set to ON, this unit consumes the same amount of power as when it is turned on.



■ Contents

Tips

I want to play back music with a single operation from the standby state	54
I want to play back music immediately after connecting an iPod or USB memory device	54
I only want to recharge my iPod	54
I want to specify an iPod track as the alarm	54
I want to display the clock constantly	54
I want to make the volume of the headphones the same as that of the speakers	54

Troubleshooting

Power does not turn on / Power is turned off	55
LED is flashing	55
Operations cannot be performed through the remote control unit	56
Display on this unit shows nothing	56
No sound comes out	57
Desired sound does not come out	58
Sound is interrupted or noise occurs	59
Cannot playback CDs	60
iPod cannot be played back	61
USB memory devices cannot be played back	62
File names on the iPod/USB memory device are not displayed properly	63



Tips

I want to play back music with a single operation from the standby state

- When a input source select buttons, ►/|| button or ▲ button is pressed, the operation is performed at the same time as the unit switches on. (🔍 p. 28)

I want to play back music immediately after connecting an iPod or USB memory device

- When connected to the USB port, the Input Source automatically changes and playback begins. (🔍 p. 37, 40)

I only want to recharge my iPod

- Connect the iPod to this unit when the unit power is on. Then turn the unit power off, and the iPod will continue to charge until fully charged. (🔍 p. 39)

I want to specify an iPod track as the alarm

- Change the playback mode of this unit to From iPod in order to use the alarm playback on an iPod touch or iPhone. After pausing the track that you want to play back, set the iPod touch or iPhone to sleep state. Alarm playback cannot be used if the power of the iPod touch or iPhone is turned off. (🔍 p. 49)

I want to display the clock constantly

- The clock can be constantly displayed by turning the CLOCK MODE button On. (🔍 p. 52)

I want to make the volume of the headphones the same as that of the speakers

- You can increase the sound from the headphones at the same volume setting by changing the H/P AMP GAIN settings. (🔍 p. 51)



Troubleshooting

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other devices operating properly?

If this unit does not operate properly, check the items listed in the table below.

Should the problem persist, there may be a malfunction. In this case, disconnect the power immediately and contact your store of purchase.

■ Power does not turn on / Power is turned off

Symptom	Cause / Solution	Page
Power does not turn on.	<ul style="list-style-type: none"> • Check whether the power plug is correctly inserted into the power outlet. 	<u>24</u>
Power automatically turns off.	<ul style="list-style-type: none"> • The sleep timer is set. Turn on the power again. 	<u>45</u>
	<ul style="list-style-type: none"> • "AUTO STANDBY" is set. "AUTO STANDBY" is triggered when there is no operation for a set amount of time. To disable "AUTO STANDBY", set "AUTO STANDBY" on the menu to "OFF". 	<u>52</u>

■ LED is flashing

Symptom	Cause / Solution	Page
Flashing red. (Flashes at 0.25 second intervals)	<ul style="list-style-type: none"> • The amplifier circuit in the unit has malfunctioned. Disconnect the power and contact the repair center. 	—
Flashing red. (Flashes at 0.5 second intervals)	<ul style="list-style-type: none"> • Protection circuit activated due to a rise in internal temperature. Turn off the power, wait for the set to fully cool down, then turn the power back on. 	<u>71</u>
	<ul style="list-style-type: none"> • Core wires of two speakers are touching each other or a core wire is sticking out of the terminal and touching the set's rear panel, activating the protection circuit. First unplug the power cord, then twist the core wires tightly or terminate the speaker cables, then reconnect. 	<u>71</u>



■ Operations cannot be performed through the remote control unit

Symptom	Cause / Solution	Page
Operations cannot be performed through the remote control unit.	• Batteries are worn out. Replace with new batteries.	<u>6</u>
	• Operate the remote control unit within a distance of about 23 ft/7 m from this unit and at an angle of within 30°.	<u>6</u>
	• Remove any obstacle between this unit and the remote control unit.	—
	• Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks.	<u>6</u>
	• The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light.	—
	• When using a 3D video device, the remote control unit of this unit may not function due to effects of infrared communications between units (such as TV and glasses for 3D viewing). In this case, adjust the direction of units with the 3D communications function and their distance to ensure they do not affect operations from the remote control unit of this unit.	—

■ Display on this unit shows nothing

Symptom	Cause / Solution	Page
Display is off.	• Press the DIMMER button on the remote control to set any setting other than OFF.	<u>46</u>



■ No sound comes out

Symptom	Cause / Solution	Page
No sound comes out of speakers.	• Check the connections for all devices.	<u>17</u>
	• Insert connection cables all the way in.	—
	• Check that input connectors and output connectors are not reversely connected.	—
	• Check cables for damage.	—
	• Check that speaker cables are properly connected. Check that cable core wires come in contact with the metal part on speaker terminals. Also, securely tighten speaker terminals. Check speaker terminals for looseness.	<u>17</u>
	• Check that a proper input source is selected.	<u>26</u>
	• Adjust the volume.	<u>27</u>
	• Cancel the mute mode.	<u>27</u>
	• Check that the correct input source is selected when audio is being input to this unit from an external device.	<u>42</u>
	• Check the digital audio output setting on the connected device. The initial settings may be off depending on the device.	<u>42</u>
	• Only 2-channel linear PCM can be input as the digital audio signal to the DIGITAL IN connector of this unit.	<u>42</u>
• No sound is output from the speakers when headphones are connected.	<u>8</u>	



■ Desired sound does not come out

Symptom	Cause / Solution	Page
Left/right volume balance is unbalanced.	<ul style="list-style-type: none"> Press the SDB/TONE button on the remote control to adjust the balance. 	<u>44</u>
No sound from the sub woofer.	<ul style="list-style-type: none"> Check the subwoofer connections. 	<u>18</u>
	<ul style="list-style-type: none"> Switch the subwoofer power on. 	—
Set values are not reflected in “SDB (Super Dynamic Bass)”, “BASS” and “TREBLE”.	<ul style="list-style-type: none"> “SDB (Super Dynamic Bass)”, “BASS” and “TREBLE” setting values are not reflected in subwoofer out. 	<u>44</u>



■ Sound is interrupted or noise occurs

Symptom	Cause / Solution	Page
During playback from the USB memory device, sound is occasionally interrupted.	<ul style="list-style-type: none"> When the transfer speed of the USB memory device is slow, sound may occasionally be interrupted. 	—
When making a call on iPhone, noise occurs in audio output on this unit.	<ul style="list-style-type: none"> When making a call, keep a distance of 7 7/8 inch/20 cm or longer between iPhone and this unit. 	—
Noise often occurs in FM/AM broadcasting.	<ul style="list-style-type: none"> Change the antenna orientation or position. 	<u>22</u>
	<ul style="list-style-type: none"> Use an outdoor antenna. 	<u>22</u>
	<ul style="list-style-type: none"> Separate the antenna from other connection cables. 	<u>22</u>



■ Cannot playback CDs

Symptom	Cause / Solution	Page
Cannot playback when the ►/ button is pressed, or cannot correctly play back a specific part of the disc.	<ul style="list-style-type: none"> The disc is dirty or scratched. Either clean the disc, or insert a different disc. 	67
Cannot playback CD-R/CD-RW.	<ul style="list-style-type: none"> CDs cannot be played back unless they have been finalized. Use a finalized disc. 	67
	<ul style="list-style-type: none"> This may be caused by poor recording conditions, or the disc itself may be of poor quality. Use a correctly recorded disc. 	—
	<ul style="list-style-type: none"> The DATA CD playback function of this unit only supports playback of MP3 and WMA files. 	65
“Unsupported” is displayed.	<ul style="list-style-type: none"> “Unsupported” is displayed if a disc that cannot be played is loaded. 	67
“NO DISC” is displayed.	<ul style="list-style-type: none"> “NO DISC” is displayed if the disc is loaded upside-down or if no disc is loaded. 	67



■ iPod cannot be played back

Symptom	Cause / Solution	Page
iPod cannot be connected.	• When using iPod by connecting it to the USB port, some iPod variations are not supported.	<u>21</u>
	• When iPod is connected by using a USB cable other than the genuine cable, iPod may not be recognized. Use a genuine USB cable.	—



■ USB memory devices cannot be played back

Symptom	Cause / Solution	Page
"NO DEVICE" is displayed.	• The set cannot recognize a USB memory device. Disconnect and reconnect the USB memory device.	<u>20</u>
	• USB memory devices of a mass storage class or those compatible with MTP are supported.	—
	• This unit does not support a connection through a USB hub. Connect the USB memory device directly to the USB port.	—
	• The USB memory device must be formatted to FAT16 or FAT32.	—
	• Not all USB memory devices are guaranteed to work. Some USB memory devices are not recognized. When using a type of portable hard disc drive compatible with the USB connection that requires power from an AC adapter, use the AC adapter that came with the drive.	—
Files on the USB memory device are not displayed.	• Files of a type not supported by this unit are not displayed.	<u>40</u>
	• The maximum file configuration that can be displayed on this unit is 255 folders, with a maximum of 255 files in each folder.	—
	• When multiple partitions exist on the USB memory device, only files on the first partition are displayed.	—
Files on a USB memory device cannot be played.	• Files are created in a format that is not supported by this unit. Check the formats supported by this unit.	<u>40</u>
	• You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit.	—
	• An unsupported format was played back. Select a supported format.	<u>66</u>



■ File names on the iPod/USB memory device are not displayed properly


Symptom	Cause / Solution	Page
The file names are not displayed properly (“...”, etc.).	<ul style="list-style-type: none">Characters that cannot be displayed are used. This is not a malfunction. On this unit, characters that cannot be displayed are replaced with a “.” (period).	—



Resetting factory settings

Perform this procedure if the display is abnormal or if operations cannot be performed.

Various settings are reset to the factory default values. Make settings again.

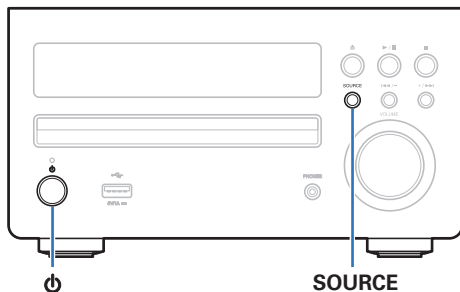

- 1 Place this unit in Standby mode. Next, while pressing and holding the SOURCE button, press and hold the $\text{\textcircled{P}}$ button for 3 seconds.**

"INITIALIZE" is displayed.



- Repeat this process if "INITIALIZE" is not displayed.



Playing back DATA CDs

■ DATA CDs formats

CD-R and CD-RW discs created in the format described below can be played.

Writing software format

ISO9660 level 1

When written in other formats, it may not be possible to play the disc properly.

Maximum number of playable files and folders

Number of files : 255

Number of folders : 255

File format

MPEG-1 Audio Layer-3

WMA (Windows Media Audio)

Tag data

ID3-Tag (Ver. 1.x and 2.x)

META-Tag (Compatible with title, artist and album names)

■ Compatible formats

	Sampling frequency	Bit rate	Extension
MP3	32/44.1/48 kHz	32 – 320 kbps	.mp3
WMA	32/44.1/48 kHz	64 – 192 kbps	.wma



- Be sure to give files the extension “.MP3” or “.WMA”. Files with any other extensions or files with no extensions cannot be played.
- Mac OS X files assigned with filenames that begin with “_” are not music data and cannot be played back.
- In accordance with copyright laws, recordings you have made should only be used for your personal enjoyment and may not be used in other ways without permission of the copyright holder.



Playing back USB memory devices

■ USB memory formats

Files stored on USB memory devices created in the formats below can be played.

USB-compatible file systems

“FAT16” or “FAT32”

- If the USB memory device is divided into multiple partitions, only the top drive can be selected.

Maximum number of playable files and folders

Maximum number of files in a folder: 255

Maximum number of folders: 255

Tag data

MP3 ID3-Tag (Ver. 2) standard

WMA META tags

■ Compatible formats

	Sampling frequency	Bit rate	Extension
WMA	32/44.1/48 kHz	48 – 192 kbps *1	.wma
MP3	32/44.1/48 kHz	32 – 320 kbps	.mp3
WAV	32/44.1/48 kHz	–	.wav
MPEG-4 AAC*2	32/44.1/48 kHz	48 – 320 kbps	.aac/.m4a
FLAC	32/44.1/48 kHz	–	.flac

*1 Fixed bit rate (CBR) format is recommended.

- *2 Only files that are not protected by copyright can be played on this unit. Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.



- If the image size of an album artwork exceeds 600 kB, then music may not be played back properly.



About Discs

Discs playable on this unit

1 Music CDs

Discs marked with the logo below can be played in this unit.



2 CD-R/CD-RW

NOTE

- Discs in special shapes (heart-shaped discs, octagonal discs, etc.) cannot be played. Do not attempt to play them, as doing so can damage the unit.
- Some discs and some recording formats cannot be played.
- Non-finalized discs cannot be played.
- If the unit is left in a room full of smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup may get dirty, preventing it from receiving signals properly.



Loading discs

- Place the disc in the tray, label side up.
- Make sure the disc tray is fully open when inserting the disc.
- Place the discs flat, 4 3/4 inch/12 cm discs in the outer tray guide, 3 1/8 inch/8 cm discs in the inner tray guide.
- Place 3 1/8 inch/8 cm discs in the inner tray guide without using an adapter.



- “Unsupported” is displayed if a disc that cannot be played is loaded.
- “No Disc” is displayed if the disc is loaded upside-down or if no disc is loaded.

NOTE

- Do not push the disc tray in by hand when the power is turned off. Doing so could damage the set.
- Do not place any foreign objects in the disc tray. Doing so could damage the set.
- If the unit is left in a room full of smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup may get dirty, preventing it from receiving signals properly.



■ Cautions on loading discs

- Only load one disc at a time. Loading two or more discs can damage the unit or scratch the discs.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs can get caught inside the player and damage it.

■ Cautions on handling

- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole in the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

■ Cautions on storing discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
 1. Places exposed to direct sunlight for long periods of time
 2. Dusty or humid places
 3. Places exposed to heat from heaters, etc.

■ Cleaning discs

- If there are fingerprints or dirt on a disc, wipe them off before using the disc. Fingerprints and dirt can impair sound quality and cause interruptions in playback.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.



Gently wipe the disc from the inside towards the outside.

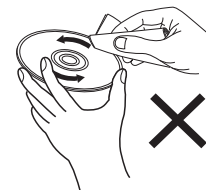

Do not wipe with a circular motion.

NOTE

- Do not use record spray, antistatic agents, benzene, thinner or other solvents.



Last function memory

This stores the settings as they were immediately before going into the standby mode.

When the power is turned back on, the settings are restored to as they were immediately before going into the standby mode.



Explanation of terms

■ Audio

MP3 (MPEG Audio Layer-3)

This is an internationally standardized audio data compression scheme, using the “MPEG-1” video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

WMA (Windows Media Audio)

This is audio compression technology developed by Microsoft Corporation.

WMA data can be encoded using Windows Media® Player. To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

Sampling frequency

Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).

The number of readings taken in one second is called the “sampling frequency”. The larger the value, the closer the reproduced sound is to the original.

Speaker impedance

This is an AC resistance value, indicated in Ω (ohms). Greater power can be obtained when this value is smaller.

Bit rate

This expresses the read amount per 1 second of video/audio data recorded. A larger number means higher sound quality, but also means a larger file size.



■ Media player

Windows Media Player

This is a media player distributed free of charge by Microsoft Corporation. It can play playlists created with Ver.11 or later of Windows Media Player, as well as WMA, DRM WMA, WAV, and other files.

■ Others

Finalizing

Finalization is the process that makes recorded CD-R/CD-RW discs playable on compatible players

Protection circuit

This is a function to prevent damage to devices within the power supply when an abnormality such as an overload, excess voltage occurs or over temperature for any reason.



Trademark information



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, iPod touch, and Retina are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademarks of Apple Inc.

- Individual users are permitted to use iPhone, iPod, iPod classic, iPod nano, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law.



Adobe, the Adobe logo and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.



Specifications

■ Audio section

- CD player

Playable frequency response:

2 Hz - 20 kHz

Wow & flutter:

Below measurable limits ($\pm 0.001\%$)

Sampling frequency:

44.1 kHz

- Audio amplifier

Rated output:

2-channel

30 W + 30 W (6 Ω /ohms, 1 kHz, T.H.D 10 %)

■ Tuner section

Receiving Range:

[FM]

87.5 MHz – 107.9 MHz

[AM]

520 kHz – 1710 kHz

Effective sensitivity:

1.2 μ V / 75 Ω /ohms

20 μ V

FM STEREO separation:

35 dB (1 kHz)

FM S/N ratio:

Monaural : 70 dB

Stereo : 70 dB

FM THD+N (1 kHz):

Monaural : 0.4 %

Stereo : 0.4 %



■ Clock/Alarm/Sleep

Clock type:	Crystal oscillator (Within 1 – 2 minutes per month)
Alarm:	Once alarm/Everyday alarm: One system each
Sleep:	Sleep timer: Max. 90 minutes

■ General


Power supply:	AC 120 V, 60 Hz
Power consumption:	70 W
Power consumption in clock mode :	14 W
Power consumption in standby mode :	0.3 W

For purposes of improvement, specifications and design are subject to change without notice.



■ Dimensions

Unit : in. (mm)

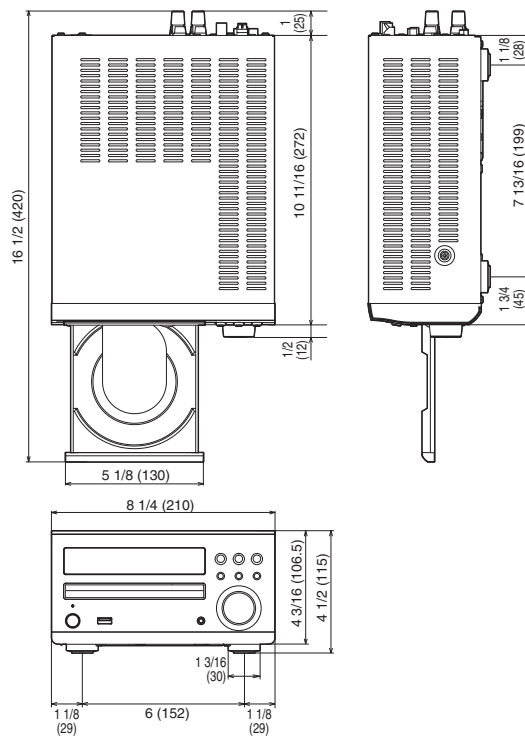

■ Weight : 9 lbs 14 oz (4.0 kg)

[Front panel](#)
[Display](#)
[Rear panel](#)

75

[Remote](#)
[Index](#)


Index

A		I		S	
Accessories	5	Inserting the batteries	6	Sleep timer	45
Adjusting the tone	44	Listening to FM/AM broadcasts	32	Supported iPod/iPhone models	21
Alarm	49	L		T	
Auto-Standby	52	Listening to FM/AM broadcasts	32	Turning the power on	26
C		M		V	
Cables	16	Menu map	47	Volume	27
Charging the iPod	39	Muting	27		
Connecting an FM/AM antenna	22	P			
Connecting an iPod	20	Playing back an iPod	36		
Connecting a power cord	24	Playing a USB memory device	40		
D		Playing CDs	28		
Display's brightness	46	Playing DATA CDs	30		
F		R			
Front panel	8	Random playback	41		
		Rear panel	11		
		Remote control unit	13		
		Repeat playback	41		
		Resetting factory settings	64		





DENON®

www.denon.com

3520 10381 10AD

Copyright ©2015 D&M Holdings Inc. All Rights Reserved.